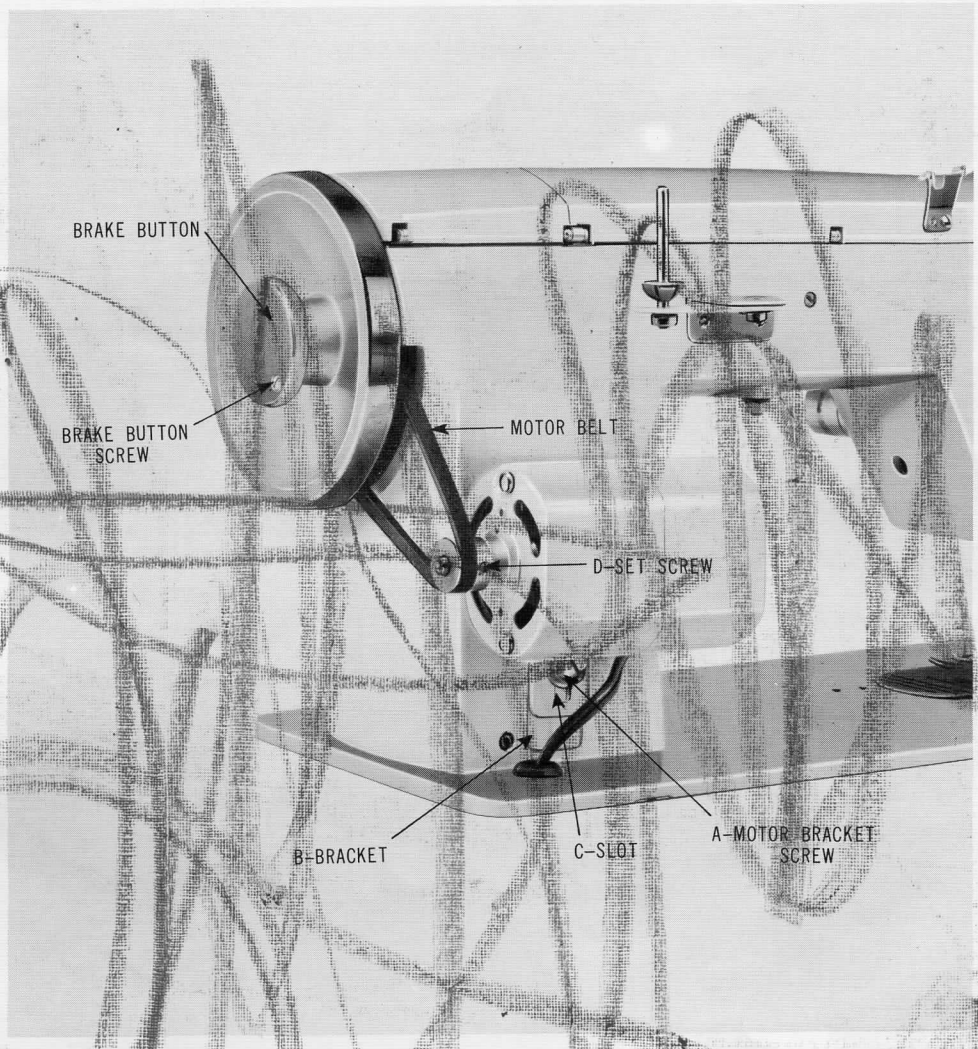

TO TIGHTEN OR REPLACE MOTOR BELT
(See Illustration Above)

To tighten motor belt, loosen motor bracket screw (A) and move bracket (B) down in slot (C), then tighten screw (A).

If belt is not properly aligned from the hand wheel to the motor pulley, loosen set screw (D) on motor pulley and move pulley in or out on motor pulley shaft.

To replace motor belt, slip the belt off the motor pulley, remove brake button screw. Remove brake button by turning to the left, counter clockwise while holding the hand wheel to prevent turning. Slip the hand wheel off the main shaft and replace belt.

To replace the hand wheel, merely slip it on the main shaft, insert the hand wheel lock washer with the prongs outward. Replace brake button and tighten. Replace brake button screw.

Turn brake button counter clockwise and test to determine that this disengages the sewing mechanism. If sewing mechanism continues to operate after above test, remove the brake button and invert brake button washer. Repeat above test.